General information, maintenance for Planet drop-down seals

→ The following information regarding the drop-down seals and accessories has to be followed. There is no warranty or liability on our part in case of disregard.

General remarks and supplements for the use, operation and maintenance of Planet drop-down seals

1. Coating or laquer

Do not coat or paint the Planet drop-down seal.

2. Maintenance

Check every two years for function (release knob, sealing blade, lift height) and dirt, clean if necessary. Never grease the sealing lip.


Planet MinE: vacuum the door edge regularly. Every 2 years uninstall the angle bracket on one side. Take out the seal to vaccum. Installing in the reverse order. Check function (release knob, sealing blade, lift height). Never grease the sealing lip.

3. Check

The Planet drop-down seal has to be checked every second year for function and damages.

4. Correct fastening of the Planet drop-down seals to be fixed from the bottom

It is important to choose the larger door part for the fastening. We recommend to fix the nails or screws only on the larger part. Do not drill or treat the drop-down seal in any way, except the regular processing to shorten according to our installation instructions. The holes for flush bolts and driving bar rods are prepared by the factory.

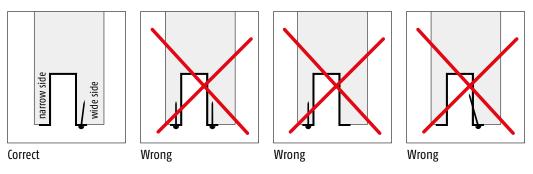

5. Important!

Do never press the drop-down seal during the fastening p otherwise the drop-down seal will be damaged or results in a misfunction.

6. Workmanlike use

A Planet drop-down seal in the sense of this definition is a component installed with regard to tighten doors, sliding doors, accordion doors of any kind and materials against sound, smoke and draught.

Important:

We reserve the right to add or modifiy at any time this information and instructions

